

WOOD GATE WHEEL

GW2

INSTRUCTIONS

1. Locate gate wheel assembly on gate as required.
2. Press down on the bracket assembly to compress the spring a minimum of 1/4" (Fig. 1).
3. Making sure the spring is compressed, mount assembly using the supplied mounting screws (Fig. 2).
4. Open and close gate to ensure gate wheel operates smoothly.

