

MAMMOTH-HD (MAMMOTH + RAPTOR)

RAPTOR (ONLY TO BE USED IN COMBINATION WITH MAMMOTH)

INSTALLATION INSTRUCTIONS FOR SQUARE PROFILES

MAMMOTH

TOP

1

2

RAPTOR

BOTTOM

QFIXSET-USA-3

LOCINOX MAMMOTH-HD

140 mm - 5 - 1/2"

20 mm 25/32"

Ø15 mm Ø9/16"

Rep. No. 118P-000022

HEX

5 mm

3 mm

3

4

! THE PRE-MOUNTED QUICK-FIX IS DESIGNED FOR WALL THICKNESSES OF 0.083" UP TO 0.190"

FOR THICKNESSES FROM 0.200" UP TO 0.313", REPLACE THE PRE-MOUNTED QUICK-FIX BY THOSE IN THE QFIXSET-USA-3 BAG. SEE STEP 6 TO DISASSEMBLE THE QUICK-FIX

QFIXSET-USA-3

Min. 0.200" Max. 0.313"

1

MAMMOTH RAPTOR

Min. 9/16" - Max. 1-3/8"

1/2

MAMMOTH RAPTOR

Min. 9/16" - Max. 1-3/8"

1/2

2

4-5/16"

2-3/8"

5-1/2"

15-3/4"

2-1/16"

8x Ø9/16"

4-5/16"

2-3/8"

5-1/2"

8-7/16"

2-1/16"

! DO NOT EXCEED Ø9/16" !

4-5/16"

2-3/8"

5-1/2"

15-3/4"

2-1/16"

8x Ø9/16"

4-5/16"

2-3/8"

5-1/2"

8-7/16"

2-1/16"

! DO NOT EXCEED Ø9/16" !

3

LOCINOX MAMMOTH-HD

140 mm - 5 - 1/2"

20 mm 25/32"

Ø15 mm Ø9/16"

LOCINOX MAMMOTH-HD

140 mm - 5 - 1/2"

20 mm 25/32"

Ø15 mm Ø9/16"

LOCINOX MAMMOTH-HD

140 mm - 5 - 1/2"

20 mm 25/32"

Ø15 mm Ø9/16"

4


DRILLVISE-2

DRILLVISE-2

5

MAMMOTH

RAPTOR

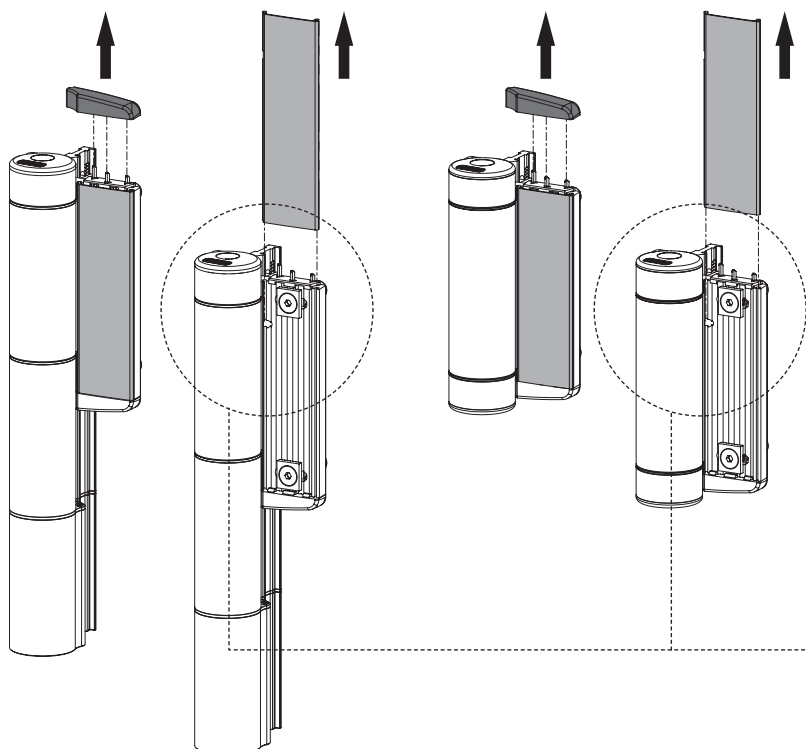


REMOVE THE
COVER CAPS
FIRST TO
REPLACE THE
QUICK-FIX IF
REQUIRED

6



ONLY FOR WALL
THICKNESSES FROM
0.200" UP TO 0.313".
REPLACE THE PRE-
MOUNTED QUICK-FIX BY
THOSE IN THE QFIXSET-
USA-3 BAG

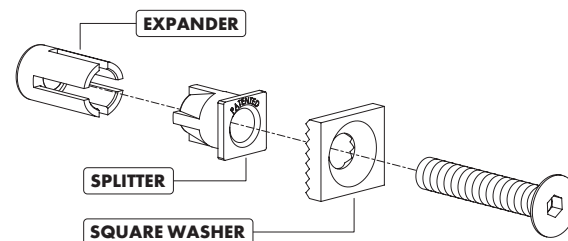


1

REMOVE EXISTING
QUICK-FIX WHERE
NEEDED. DISCARD
EXPANDER, SPLITTER,
BOLT (KEEP WASHER!)





2

REPLACE WITH
QFIXSET-USA-3
AND REUSE
THE SQUARE
WASHER



7

HEX
5mm

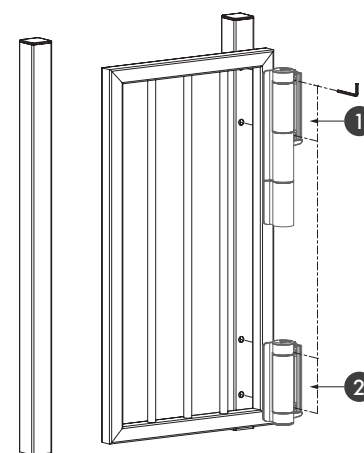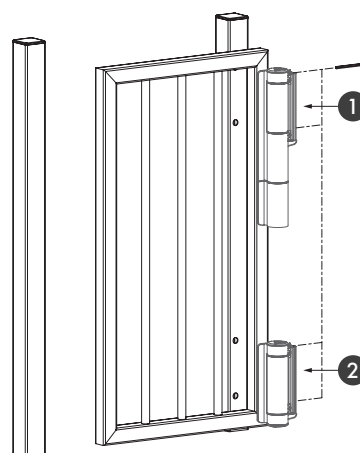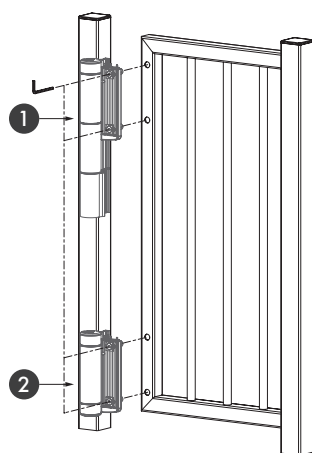
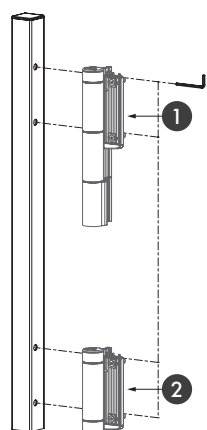


8

MAMMOTH

RAPTOR


HEX
3mm

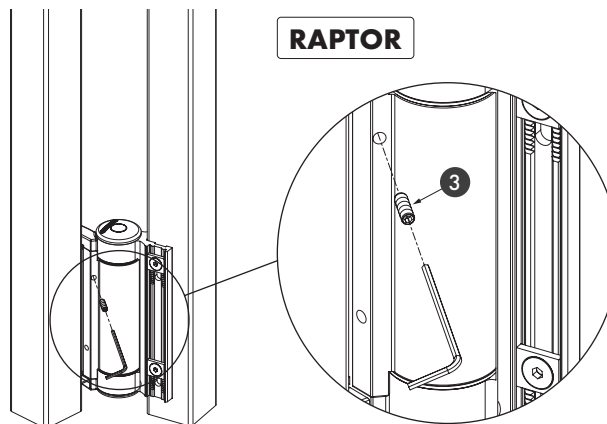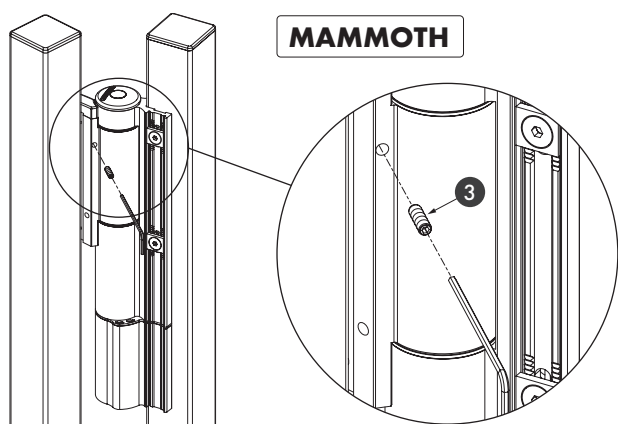


RE-INSTALL
THE COVER CAPS
AND LOCK
THE QUICK-FIX
COVER WITH
SET SCREW

9

HEX
3mm

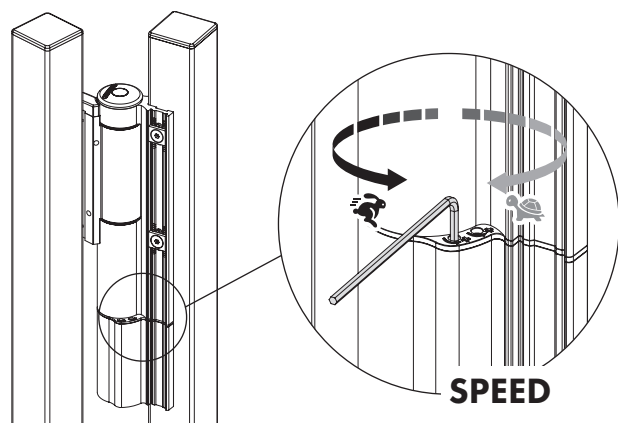

SPEED

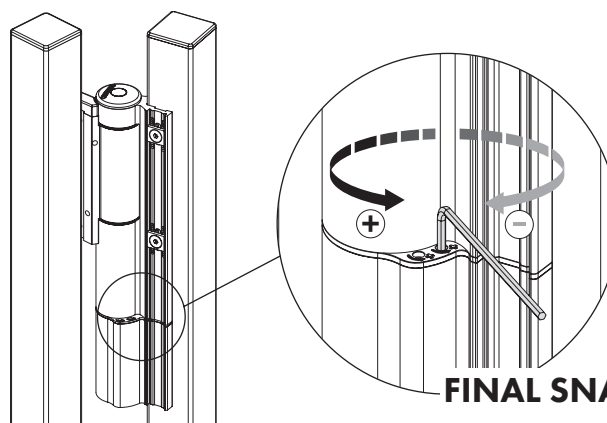

FINAL SNAP