


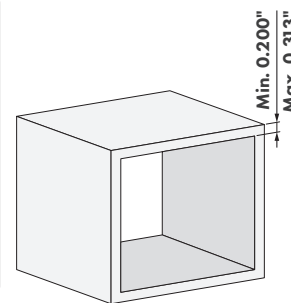

FOR THICKNESSES FROM 0.200" UP TO 0.313", REPLACE THE PRE-MOUNTED QUICK-FIX BY THOSE IN THE QFIXSET-USA-3 BAG. SEE STEP 6 TO DISASSEMBLE THE QUICK-FIX





Min. 9/16" - Max. 1-3/8"



Min. 9/16" - Max. 1-3/8"

Min. 9/16" - Max. 1-3/8"

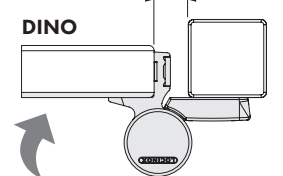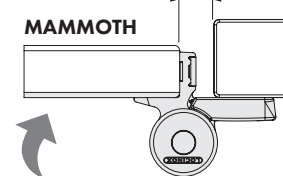


**DO NOT EXCEED
Ø9/16" !**

**DO NOT EXCEED
Ø9/16" !**




5

MAMMOTH

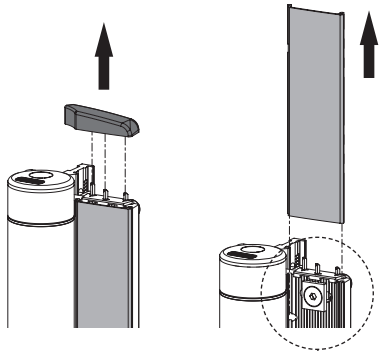

DINO

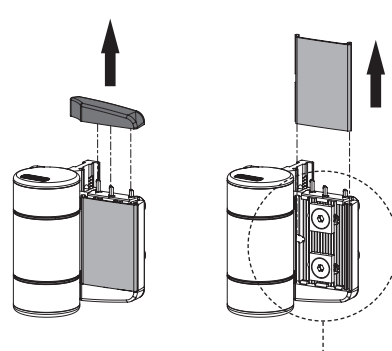


REMOVE THE
COVER CAPS
FIRST TO
REPLACE THE
QUICK-FIX IF
REQUIRED

6



ONLY FOR WALL
THICKNESSES FROM
0.200" UP TO 0.313".
REPLACE THE PRE-
MOUNTED QUICK-
FIX BY THOSE IN THE
QFIXSET-USA-3

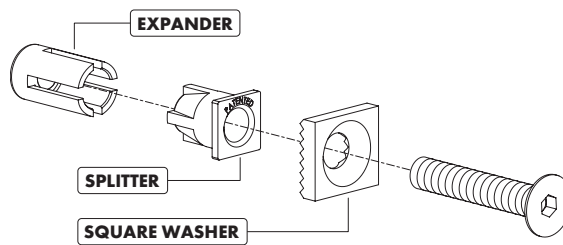


1





REMOVE EXISTING
QUICK-FIX WHERE
NEEDED. DISCARD
EXPANDER, SPLITTER,
BOLT (KEEP WASHER!)

2


REPLACE WITH
QFIXSET-USA-3
AND REUSE
THE SQUARE
WASHER




7

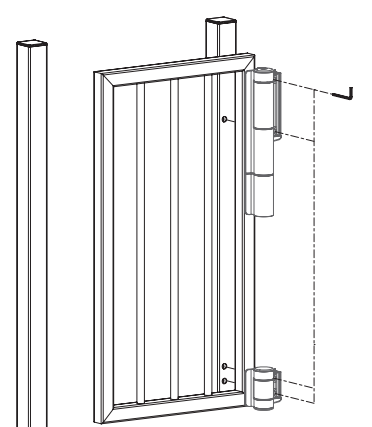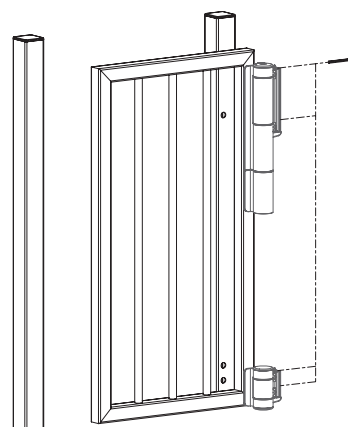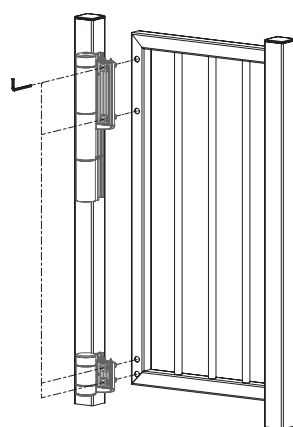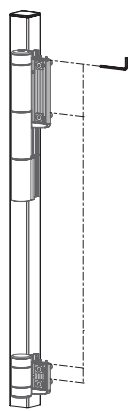

8

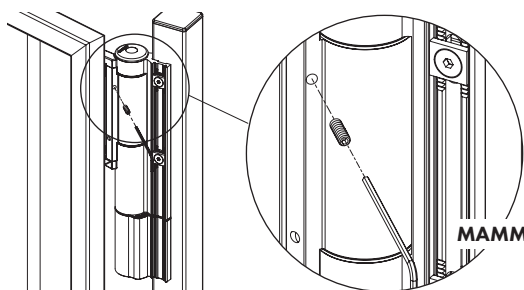

MAMMOTH


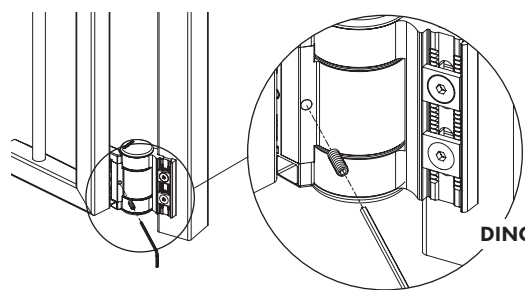


DINO





RE-INSTALL THE COVER
CAPS AND LOCK THE
QUICK-FIX COVER
WITH SET SCREW

9

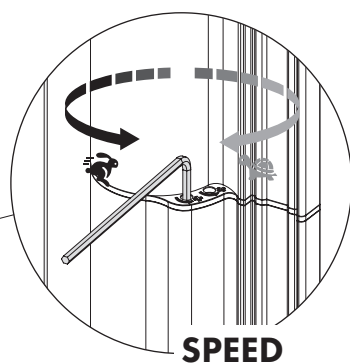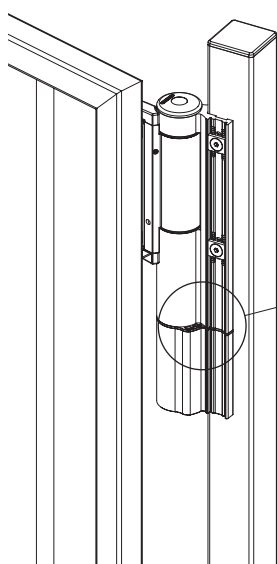

SPEED

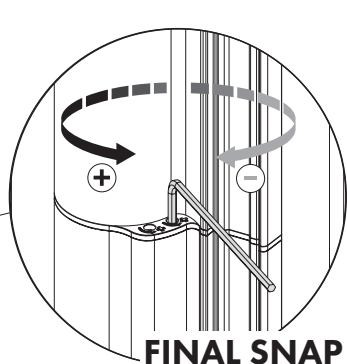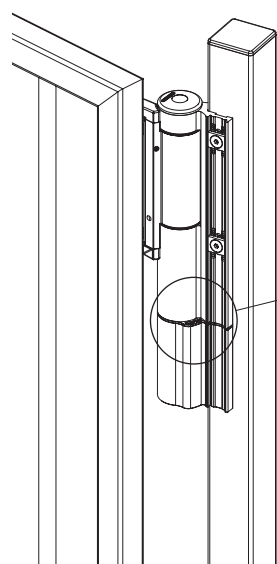

FINAL SNAP

