


NW38310Q-CD CONTEMPORARY POST LATCH

INSTALLATION

1. Locate the desired mounting height for the latch on the fence post and mark the locations of the mounting holes. Drill appropriate pilot holes for the mounting screws. Align the latch with the mounting holes and attach to the post with the supplied lag screws (Figure 1).
2. With the gate closed, position the striker bar in the latch assembly and mark the locations of the mounting holes. Drill appropriate pilot holes for the mounting screws. Realign the striker bar and attach to the post with the supplied lag screws (Figure 2).
3. Test the locking and unlocking of the latch by pressing the button on the lock pin and moving it to the locked and unlocked positions (Figure 3).
4. Position the handle on the striker bar as required using the supplied lag screws, bolt, washer, and nut (Figure 2).

Step 1

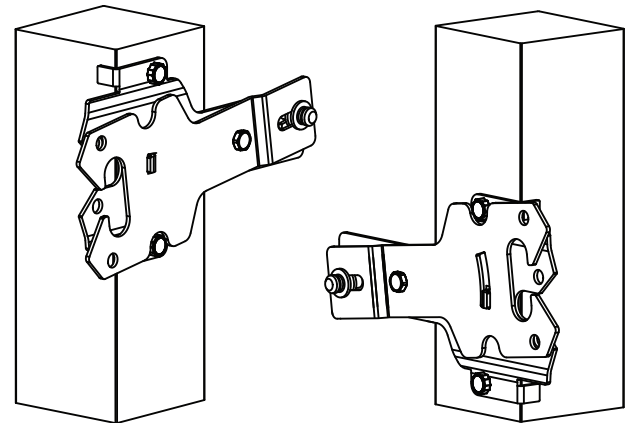

LEFT-HAND
APPLICATION

RIGHT-HAND
APPLICATION

Figure 1

Step 3

LOCK PIN: To lock, press the lock pin button and slide the lock pin to the locked position.

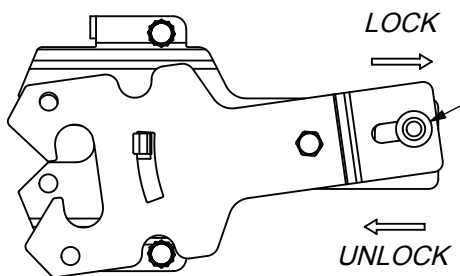


Figure 3

Steps 2 & 4

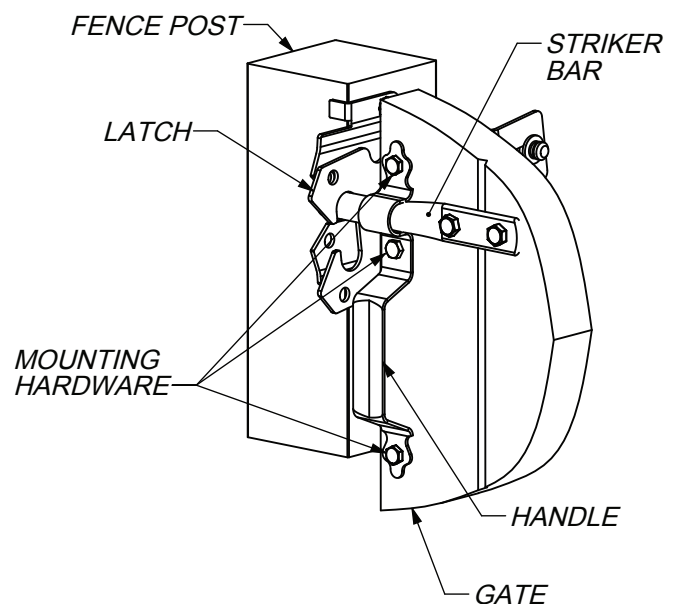


Figure 2