



# ***CORRECT***

***INSTALL  
PIN AS  
SHOWN***

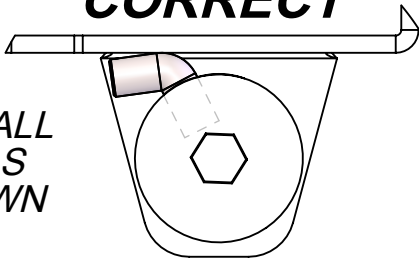

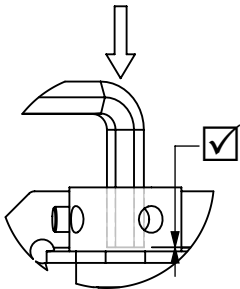

*THE WRENCH  
MUST BE  
INSERTED  
ALL THE WAY  
TO THE  
BOTTOM OF  
THE SOCKET  
TO PREVENT  
DAMAGE  
DURING  
ADJUSTMENT*

