


VERTICLOSE-2 WALL

INSTALLATION INSTRUCTIONS FOR SQUARE PROFILES

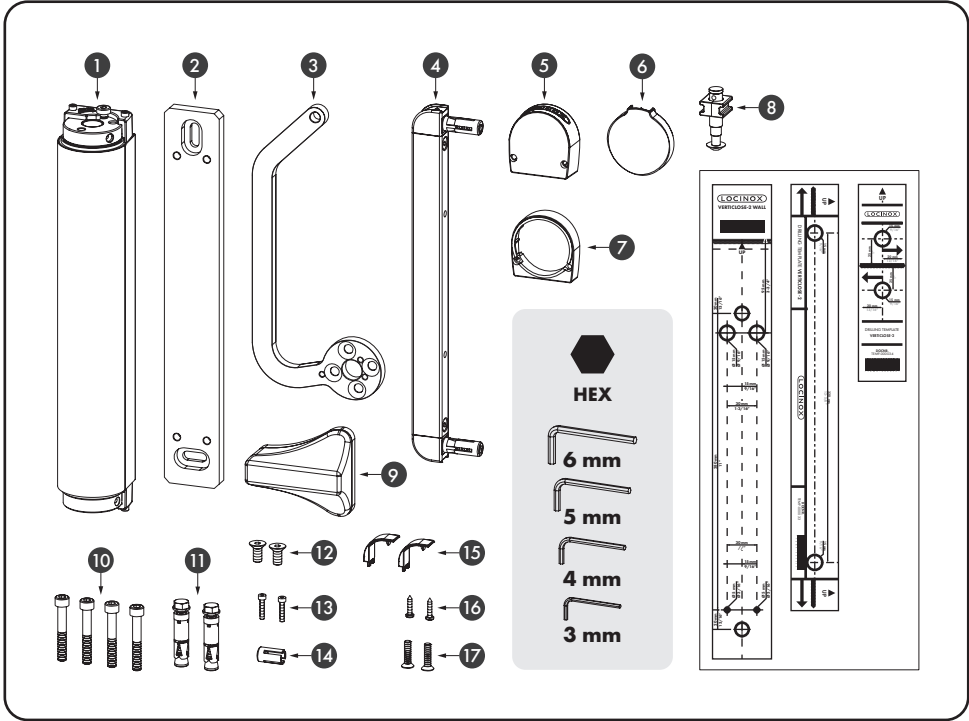

THE PRE-MOUNTED FASTENERS (QUICK FIX) ARE DESIGNED FOR GATE FRAMES WITH A WALL THICKNESS OF 0.083" UP TO 0.190"

FOR THICKNESSES FROM 0.200" UP TO 0.313" USE THE QUICK-FIX OUT OF THE QFIXSET-USA-4 BAG.

QFIXSET-USA-4

Min. 0.200"
Max. 0.313"

